

合格证
QC PASS



Wechat
Official Account

神牛微信公众号

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋

电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao' an District, Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423

E-mail: godox@godox.com

www.godox.com

 
Made in China | 705-C7R000-00

UK
CA

CE



Godox

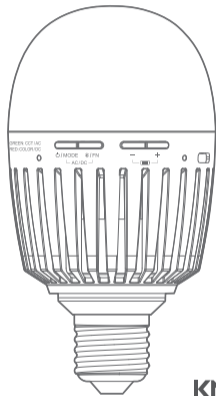

KNOWLED C7R

RGBWW 影视创意灯泡

KNOWLED RGBWW Creative Bulb

使用手册

Instruction Manual

Safety Instructions and Attentions

First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -10°C to +40°C operating environment and normal humidity environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.

12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
14. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
15. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
16. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
17. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
19. Please take off the protective cover before using.
20. This product complies with ROHS and CE certification, please refer to the relevant national standards for use and operation.
21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
22. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.

24. One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
26. Machine failures caused by non-standard operation are not covered by the warranty.

keep these instructions!

Foreword

 
Thank you for purchasing!

Powered by AC/DC power source, KNOWLED RGBWW creative bulb C7R is featured with built-in lithium battery, adjustable brightness, color temperature and HSI. It can achieve RGBWW mode, HSI mode, GEL mode and 14 FX modes when collocating with "Godox light" APP.

⚠ Warning

- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Please shut off the power source when not in use.
- ⚠ The light body shell will be hot after long time use, do not touch.

Name of Parts

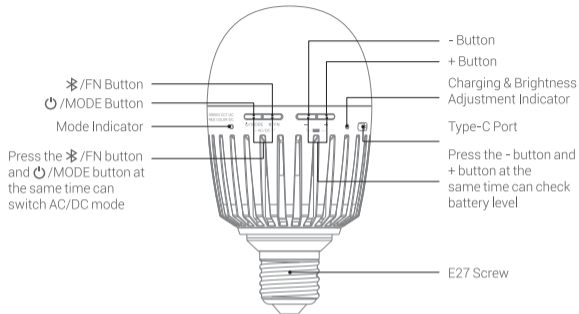

What's Inside



Light Body*1



Storage Bag*1

 


Type-C Power Cable*1



Instruction Manual*1

AC Power Supply




E27 screw holder
(200V-240V~50/60Hz 50mA)

Lithium Battery Power Supply



7.6V 1300mAh

 DC Power Supply

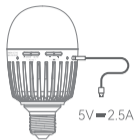


AC Mode/DC Mode

Long press the /MODE button and /FN button at the same time can switch power supply mode. The mode indicator flashes green three times means the bulb is in AC mode. It will not switch to battery power supply automatically once the AC power source is cut off. The mode indicator flashes red three times means the bulb is in DC mode. It will switch to battery power supply automatically once the DC power source is cut off.

Note: The bulb is AC mode by default.

Battery

 Long press the + button and - button at the same time in power on status to check the battery level, the light body will flash.
The light body flashes green once means 1 grid of battery level.
The light body flashes green twice means 2 grid of battery level.
The light body flashes green three times means 3 grid of battery level.
The light body flashes red once means low battery level, please charge in time.



Power Switch

 
Long press the /MODE button for 2s to power on/off the device, after connected to power source.

Brightness Adjustment

Short press the - button or + button to switch the brightness among 10 levels from 0% to 100% with 10% of increment each stop. Quick adjustment is available by long pressing the - button or + button. The brightness is also adjustable through "Godox Light" APP from 0% to 100%.

CCT Mode


Short press the /MODE button to CCT mode, the mode indicator will be constant on green. Short press the /FN button twice to adjust CCT among 6 levels in cycle: 2000K, 2700K, 3200K, 4300K, 5500K and 6500K. Short press the /FN button quickly can return to the previous menu. The CCT (2000K~10000K) and GM (-50~+50) are also adjustable through "Godox Light" APP.



HSI Mode

Short press the /MODE button to HSI mode, the mode indicator will be constant on red. Short press /FN button to switch among the following 9 colors in cycle: red, green, blue, cyan, magenta, yellow, pink, violet and orange. Short press /FN button quickly twice can return to the previous menu. The RGBW mode, HSI mode, GEL mode, FX mode and color picker are also available through "Godox Light" APP.

 Note: The default saturation of HSI is 100% in light body control.

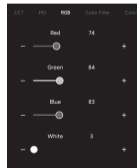

Bluetooth Setting

Bluetooth reset: Long press the FN button until it flashes blue three times, it will return to the previous effect after successfully reset.
APP download: Scan the QR code to download "Godox Light" APP (both Android and iOS systems are available).

Note: the APP can be used directly on the firstly installed device (smartphone or tablet). When changing to other mobile device, the light shall be reset before the normal usage of APP. The Bluetooth is on by default.



Overheating Protection

The working environment temperature of C7R is -10°C to 40°C , it is recommended to keep the environment temperature below 40°C to avoid any overheating problems. If the bulb enters "battery protection mode", it will resume normal operation after the internal temperature has cooled down.

Warning

Operating frequency: 2402MHz – 2480MHz
Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity>

The device complies with RF specifications when the device used at 0mm from your body.

Technical Data

Model	C7R
Input Power	Max.10W
Lithium Battery Parameters	7.6V/1300mAh
Lithium Battery Charging Time	Approx 2h 20min
Lithium Battery Working Time	Approx 1h
DC Input	5V \equiv 2.5A
AC Input	200V~240V~50/60Hz 50mA
Compatible Bulb Holder	E27
CCT (adjustable on APP)	2000K-10000K
Brightness (adjustable on APP)	0%-100%
Average TLCI	≥ 97
Average CRI	≥ 96
Illuminance Data(100% brightness & 5500K CCT)	$\approx 360\text{Lux}/34\text{fc}(1.64\text{ft}/0.5\text{m})$ $\approx 101\text{Lux}/9\text{fc}(3.28\text{ft}/1\text{m})$
Controlling Method	Bluetooth APP control/light body control
Bluetooth Controlling Distance	Max. 30m
Working Environment Temperature	$-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$
Dimension	73mm*73mm*136mm
Net Weight	256g

Specifications and data may subject to changes without notice.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	NO	Without warranty